



**MASON INDUSTRIES, Inc.**  
Manufacturers of Vibration Control Products

350 Rabro Drive  
Hauppauge, NY 11788  
Tel. : 516/348-0282  
Fax : 516/348-0279  
info@mason-ind.com

708 N. Valley St. Suite K  
Anaheim, CA 92901  
Tel. : 714/535-2727  
Fax : 714/535-5738  
info@masonanaheim.com

TYPE

**Z-1011  
SNUBBERS**

Dwg. No. A-18318-1

**TO INSTALL AND ADJUST SNUBBERS**

1. Snubbers are inactive during normal operation and clearance must be maintained.
2. To maintain clearances around isolation bushing, unit is furnished with spacer washers and spacer bushing, these to remain in unit during installation only.
3. If snubbers are installed on equipment such as blowers or pumps with flexible connections that move and remain in a different position during operation, final positioning and adjustment of snubbers must be made with equipment in operation.
4. Use shims at brackets as required so that units are installed without applying pressure on spacer washers or bushing.
5. After units are installed, remove spacer washers and bushing as follows:
  - A. Remove lock nut from thru-bolt and remove thru-bolt.
  - B. Remove anchor bolts from one bracket. If bracket was shimmed, note shim position.
  - C. Remove bracket and remove spacer washers and spacer bushing;
  - D. Reinstall bracket and thru-bolt. Shim as before if shims were used.
  - E. Lock thru-bolt in place with jam nut.

**ALTERNATE  
180° POSITION**

